

CORDLESS



ONEPWR™
BATTERY SYSTEM

USER GUIDE

ONEPWR®
HOMEPRO DETECT
CORDLESS VACUUM

F180PSV25A



This machine is intended for household use only and NOT for commercial or industrial use. This machine is intended for dry vacuuming only. Do not use this machine for any other purpose. PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

1. Don't leave the charger plugged in when unattended.
2. Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
3. Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
4. Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
5. Don't handle the charger, battery or use the machine with wet hands.
6. Don't unplug the charger by pulling on the power cord. The power cord cannot be replaced. If the cord is damaged the charger should be scrapped.
7. Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
8. Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
9. Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
10. Don't use the machine with a damaged battery. If the battery is damaged return the machine, battery and charger to the point of purchase.
11. Don't use on a surface that is damaged, uneven or incorrectly fitted.
12. The brush roll in the floorhead constantly rotates. Never use on one spot for any prolonged period of time as this may damage the floor surface.
13. Always check suitability with the manufacturer of your flooring prior to using the machine.
14. Only HOOVER ONEPWR batteries and chargers should be used with this machine. See table within this user guide for the full list of models.
15. Always stand the charger on a stable, level surface, uncovered and away from any heat source.
16. Always protect the charger power cord from heated surfaces and open flames.
17. Only HOOVER ONEPWR recommended tools and accessories should be used with this machine.
18. Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
19. Keep all openings clear, free from debris and don't overfill the dirt container as this may affect the airflow/suction.
20. Turn off all controls on the machine before disconnecting or connecting the battery.
21. Only use the machine indoors on dry surfaces and keep the area you're cleaning well lit.
22. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.

IMPORTANT SAFETY INFORMATION 3

25. Store the machine in a cool, dry area. Keep the machine away from rain and moisture.
26. Use only Australian/New Zealand approved 10amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
27. Take extra care when using the machine on the stairs.
28. Always test on an inconspicuous area of the flooring first.
29. Always make sure the separator and filter are fitted correctly before using your machine and only use the machine with the filter and separator in place.
30. Always check the powered floorhead and accessories are free from damage, dirt and debris before using.
31. Always use the wall mount to store the machine in between uses and never leave in the self-stand position for long periods or when unattended. Only use the self-stand positioning on a flat and stable surface.

BATTERY SAFETY PRECAUTIONS


32. Replace the battery with a HOOVER ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
33. Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire. The battery and charger have no user serviceable parts. Fire or injury may result.
34. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
35. When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
36. In case of battery leakages avoid any contact with the skin. If liquid comes into contact with the skin, wash immediately with soap and water, then neutralise with lemon juice or vinegar. If liquid gets into the eyes, flush with clean water for at least 10 minutes, then seek immediate medical attention.
37. To reduce the risk of fire, personal injury, and product damage due to short circuit, never immerse the tool, battery pack, or charger in fluid or allow fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc. can cause a short circuit.

PLEASE KEEP INSTRUCTIONS FOR FUTURE USE.

4 MACHINE OVERVIEW

- 1 Carry handle
- 2 Handheld
- 3 Dirt cup filter (hidden)
- 4 Dirt cup
- 5 Handheld release
- 6 Flexi clean pole
- 7 Flexi clean pole release
- 8 Floorhead release
- 9 Floorhead
- 10 Hair wrap resist brush roll
- 11 Battery level indicator light
- 12 Boost button
- 13 Debris Detect mode
- 14 Power ON/OFF
- 15 Battery dock
- 16 Dirt cup release grip
- 17 Dirt cup release
- 18 Dirt cup lid release
- 19 ONEPWR battery
- 20 ONEPWR charger
- 21 Wall mount
- 22 Crevice tool
- 23 Stair tool
- 24 Pet Tool

Unit

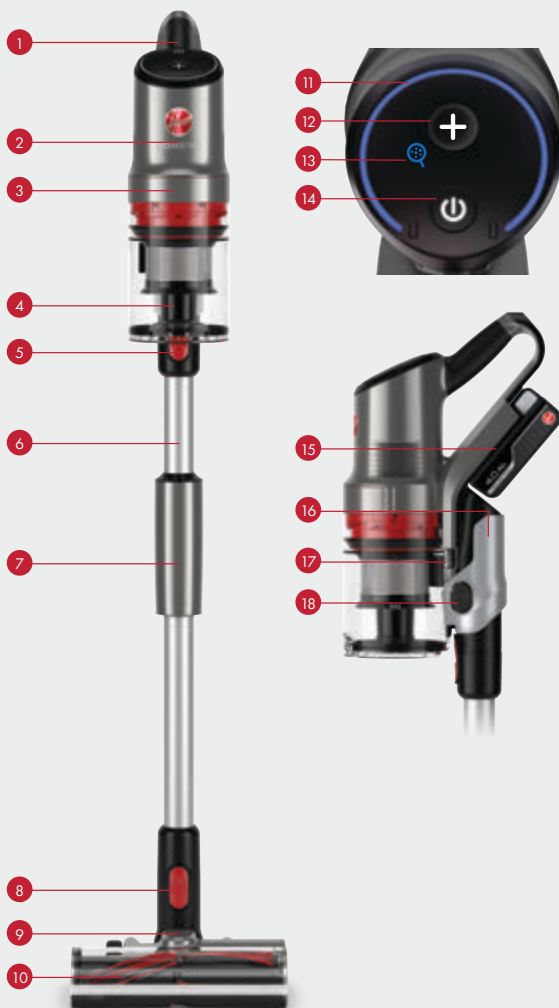

Accessories



Images are illustrative only.

ASSEMBLY



Push the flexi clean pole into the floorhead until it clicks.




Attach the handheld to the flexi clean pole until it clicks into position.

ATTACHING THE WALL MOUNT

IMPORTANT: Always store the machine in the wall mount. Never leave the machine in the self-stand position for long periods or when unattended.



Rotate the flexi clean pole and slide the sleeve down to lock the pole into the straight position.

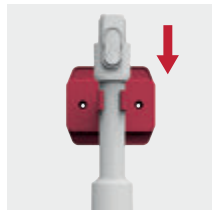


Without the handheld attached to the flexi clean pole and floorhead, push the wall mount onto the top and back of the flexi clean pole.



Choose a location for the machine to be stored. Stand the floorhead and flexi clean pole against the wall. Make sure the floorhead is flat on the floor. Do not hang.



Holding the wall mount securely against the wall, make a small mark for each screw. Remove the pole from the wall mount before fixing to the wall.

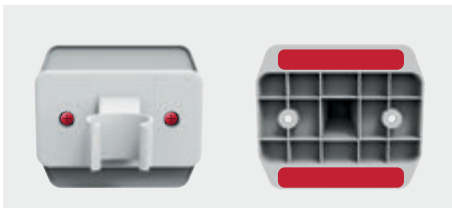

Secure the wall mount to the wall using the wall plugs and screws. For a 'screw free' option use two adhesive mounting strips (not included) attached to the back of the wall mount. Make sure the wall mount is secured to the wall before use.



Fully assemble the machine and firmly press the machine into the wall mount to secure. Always ensure the machine is securely locked into place.



Lock the floorhead into the self-stand position before storing it in the wall mount and always store the machine with the flexi clean pole straight.

6

OPERATION

CHARGING THE BATTERY

**THIS MACHINE IS ONLY TO BE USED WITH HOOVER ONEPWR BATTERIES AND CHARGER.
PLEASE READ THE SAFETY GUIDE BEFORE USE.**

NOTE: Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.



Plug the charger into the mains power. Slide the battery on to the charger.



The battery lights will flash white to indicate the battery is charging. The battery lights will illuminate in turn until all four lights are illuminated and the battery is charged. When fully charged the lights will go out.



To check the battery charge level press the battery symbol.



When fully charged, press and hold the side buttons and slide the charger off the battery to remove.



Charging light indicators

ERROR

Charge/battery fault.

CHARGING DELAY

Battery pack is too hot or too cold. 

OPERATION

NOTE: The brush roll in the floorhead constantly rotates. Never use the floorhead on one spot for an extended period of time as the brush roll may damage the surface.

If there is a blockage, or the brush roll in the floorhead is obstructed, the brush roll motor protection sensor may activate. The brush roll will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



Slide the battery into the machine until it clicks into place.



Place your foot on the floorhead. Pull the handle backwards to recline.



Press the power on/off button to switch the machine on. When the floorhead is attached the brush roll will turn.



The battery indicator will illuminate white to show the remaining runtime.



For particularly dusty areas press the + boost button to increase the suction. The + boost button will illuminate. Press the + boost button again to deactivate.



Low Battery
When less than 20% charge is remaining the indicator light will flash red indicating the battery is running low.



To remove the battery press both the buttons to release.

OPERATION - DEBRIS DETECT

NOTE: The brush roll in the floorhead constantly rotates. Never use the floorhead on one spot for an extended period of time as the brush roll may damage the surface.

If there is a blockage, or the brush roll in the floorhead is obstructed, the brush roll motor protection sensor may activate. The brush roll will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



Slide the battery into the machine until it clicks into place.



Place your foot on the floorhead. Pull the handle backwards to recline.



Press the power on/off button to switch the machine on. When the floorhead is attached the brush roll will turn.



Debris Detect Mode

The machine will start with Debris Detect Mode already activated. The Debris Detect icon will illuminate white and the battery indicator will show the remaining runtime.



Debris detected

In Debris Detect mode, if an increased amount of debris is detected the suction will automatically increase and the Debris Detect icon and battery indicator light will turn blue.



+ Boost Mode

To manually increase suction press the + boost button. The + boost button will illuminate white. To return to Debris Detect Mode press the + boost button twice (white light illuminated).



Standard/Eco Mode

To deactivate Debris Detect Mode (for when the automatic increase in suction is not required), press the + boost button twice. The Debris Detect icon and battery light will illuminate green and the machine will run in standard mode. To reactivate Debris Detect Mode press the + boost button.



Low Battery

When less than 20% charge is remaining the indicator light will flash red indicating the battery is running low.

USING THE FLEXI CLEAN POLE



Rotate the flexi clean pole sleeve and slide the sleeve up the pole into the straight position to release.




The pole will flex during use to easily reach and clean under furniture.



Rotate the flexi clean pole and slide the sleeve down to lock the pole into the straight position.

USING THE TOOLS

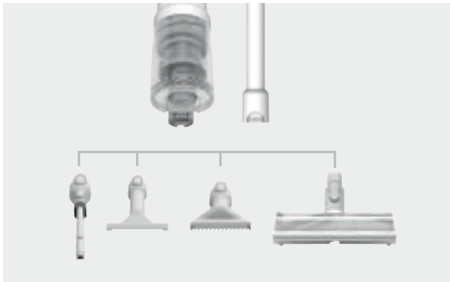

All of the accessories including the floorhead can be attached directly onto the handheld or the flexi clean pole.

To remove the tools, press the button on the tool and pull to release.



Crevice tool

With integrated dusting brush. Designed to tackle the tight and hard to reach areas of the home. To use the brush press the button on the brush and slide to the end of the crevice tool.



Stair tool

Created for easier cleaning on staircases, the velour strip will help agitate the carpet pile and remove any visible dirt and debris.



Pet Tool

The specialist silicone comb helps to gather and remove pet hair on carpet, upholstery and pet beds. (Not to be used on pets).

10

MAINTENANCE

WARNING: Always remove the battery before carrying out any maintenance or troubleshooting.

EMPTYING THE DIRT CUP

CAUTION: Don't over fill the dirt cup to avoid blocking the air flow through the machine. For best cleaning results, do not fill beyond 'MAX' and empty the dirt cup after every use. If the dirt cup is overfull and becomes blocked, the on/off power button will flash and the machine will switch off.



Press the button on the flexi clean pole and pull to remove the handheld from the pole.



Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.



Slide the dirt release grip back and forth to remove any remaining dirt from the dirt cup.



Push the dirt cup door closed until it clicks into place.

REMOVING THE DIRT CUP AND CLEANING THE SEPARATOR




Press the button on the flexi clean pole and pull to remove the handheld from the pole.



Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.




Slide the dirt release grip down, press and hold the dirt cup release button and pull the dirt cup to remove.

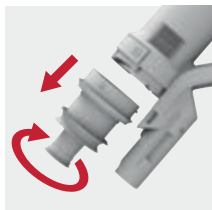

Twist and turn the separator to remove it from the handheld.



Tap the separator over a bin to remove dirt and debris and wipe over the metal shroud with a dry cloth.

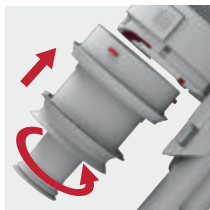

Line up the tab on the separator with the handheld and twist to lock into place.



Line up the dirt release grip with the handheld and slide the dirt container into place. The dirt bin will click when correctly fitted.

REMOVING AND CLEANING THE WASH TOOL AND ATTACHMENTS

WARNING: If the filter is blocked, the on/off power button will flash and the machine will switch off. Wash the pre-motor filter with warm water (40°C max) and leave for 24 hours or until fully dry before refitting into the machine. For best cleaning results, filters should be tapped over a bin every 4-6 uses to remove dirt/debris, washed every 3 months and replaced every 9-12 months. Make sure all filters are in place before using the machine.



Push the tab upwards to release the filter.



Lift the filter frame out of the handheld.



Separate the sponge filter from the filter frame.




Tap the sponge filter and the frame over a bin to remove any dirt and debris.



Wash both filter parts under running water (40°C max). Leave for 24 hours or until fully dry before replacing.



Once fully dry, refit the sponge filter into the frame and slide it back into the machine. Do not use the machine without both filters in place.

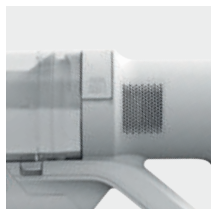

The filter will only fit one way and the frame will sit flush when correctly fitted.

CHECKING FOR BLOCKAGES

WARNING: If there is a blockage or the brush roll in the floorhead is obstructed, the brush roll motor protection sensor may activate. The brush roll will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



The On/Off button will flash and the machine will switch off if a blockage is detected.




The machine will switch off.

REMOVING A BLOCKAGE IN THE FLEXI CLEAN POLE



Press the button on the flexi clean pole and pull to remove the handheld from the pole.

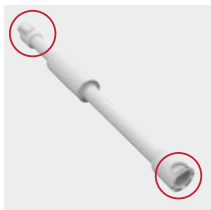

To test for a blockage, drop a small ball of paper into the flexi clean pole. The paper will drop through if the pole is clear. Use a blunt object to remove any blockage.


REMOVING A BLOCKAGE FROM THE HANDHELD



Hold the handheld over a bin and press the dirt release button to allow dirt and debris to fall out.



Slide the dirt release grip down, press and hold the dirt cup release button and pull the dirt cup to remove.

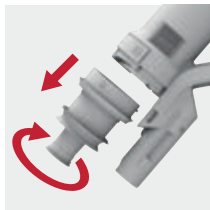

Twist and turn the separator to remove it from the handheld.



Check and clear any dirt and debris from the handheld connection points.

REMOVING THE BRUSH ROLL AND CHECKING FOR BLOCKAGES IN THE FLOORHEAD

WARNING: If the brush roll in the floorhead is obstructed, the brush roll motor protection sensor may activate. The brush roll will stop, the on/off power button will flash, and the machine will switch off. To reset, first remove the tool from the flexi clean pole or handheld and clear any obstruction. Wait 1 minute before refitting the tool. Switch the machine on. If the power button still flashes check the filter or for blockages.



The On/Off button will flash and the machine will switch off if a blockage is detected.



Press the button on the floorhead and pull to remove from the flexi clean pole.



Tilt the floorhead on its back.



Turn the tab on the brush roll cover clockwise to release the brush roll.



Pull the brush roll from the housing.



Wipe clean any remaining dirt and debris on the brush roll.




Check the floorhead for any blockages, dirt and debris.



Wipe the brush roll housing to remove dirt and debris.



To refit, slide the brush roll into the floorhead and onto the spindle.

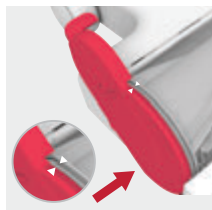

Line up the arrows and push the brush roll cover flush to the floorhead.



Turn the tab on the brush roll cover anticlockwise to lock into place.

WARNING: To reduce the risk of personal injury, always turn power switch off and remove battery before cleaning or servicing.

Is there an accessory missing?

- Check the contents on the box to make sure the part is definitely included with your machine.

Why does the machine have no power?

- The battery is not fitted correctly. See 'Operation' section.
- The battery has no charge. See 'Charging the battery' section.
- The On/Off power button has not been activated. See 'Charging the battery' section.
- The motor thermostat may have tripped. Empty the dirt container and check for blockages. Clean the filters and allow the machine to cool for approximately 1 hour. If you have washed the filters, wait 24 hours to fully dry before placing back on the machine. See 'Cleaning and replacing the filter' section.
- The brush roll motor sensor in the powered floorhead has been activated. To reset remove the powered floorhead/tool from the flexi clean pole/handheld and clear any obstruction. Wait 1 minute before refitting the powered floorhead/tool, switch the machine on. See 'Removing the brush roll and checking for blockages in the floorhead' section.

Why won't the machine pick up?

- The filter may not be fitted. See 'Cleaning and replacing the filter' section.
- The filters may be clogged or may need replacing. See 'Cleaning and replacing the filter' section.
- The dirt cup may not be fitted correctly. See 'Removing the dirt cup and cleaning the separator' section.
- The dirt cup or separator may be blocked. Check the dirt cup and handheld inlet for blockages. See 'Removing the dirt cup and cleaning the separator' section.
- There may be a blockage. See 'Checking for blockages' section.
- The powered floorhead may be blocked. See 'Removing the brush roll and checking for blockages in the floorhead' section.
- The handheld, powered floorhead and flexi clean pole may not be correctly fitted. See 'Assembly' section.

Why is the power button flashing?

- There may be a blockage or the brush roll is obstructed. See 'Checking for blockages' and 'Removing the brush roll and checking for blockages in the floorhead' sections.

Why won't the brush roll in the powered floorhead turn?

- The brush roll in the floorhead may be obstructed. See 'Removing the brush roll and checking for blockages in the floorhead' section.
- The handheld, flexi clean pole or floorhead may not be correctly fitted. See 'Assembly' and 'Using the tools' sections.

Why is there a red light?

- Battery charge is running low (<20%). See 'Charging the battery' section.

TECHNICAL SPECIFICATIONS	F180PSV25A
Product Description	Hoover ONEPWR [®] HomePro Detect
Console Model Number	CLSVHPMTANZV
Product Weight (without battery pack)	3.0 KG
Dust Cup Capacity	700ml
Runtime*	Up to 45 mins
Charge Time (per battery)	3 hours
Charger Model Number	BV05115ANZV
Battery(s) Included	1x 4.0Ah
Battery Model Number	BH29040ANZV
Battery Voltage	18V Li-Ion

COMPATIBLE BATTERY PACKS

MODEL	TYPE	RATED VOLTAGE	RATED CAPACITY	CELL NUMBER
F18BTOP2IJ4	Li-Ion	18V	4.0Ah	5
BH29040ANZ	Li-Ion	18V	4.0Ah	5
BH29040ANZV	Li-Ion	18V	4.0Ah	5
BH19240ANZV	Li-Ion	18V	4.0Ah	10

Subject to technical change without notice.

*Runtime is based on internal testing. Actual runtime will vary under specific conditions. Tested using a non-motorised cleaning tool in standard mode.

Description of Symbols



Regulatory
Compliance
Mark



For Indoor
Use Only



Read User
Manual

Distributed By:

Techtronic Industries Australia Pty Ltd
31 Gilby Road, Mount Waverley, VIC 3149, Australia
Web Address: www.hoover.com.au
Customer Careline: 1300 698 130

Techtronic Industries N.Z. Limited
Unit C, 70 Business Parade South, East Tamaki, Auckland 2013, New Zealand
Web Address: www.hoover.co.nz
Customer Careline: 0800 126 688



HOOVER.COM.AU
HOOVER.CO.NZ